

20

The controls on your Opera 20 chair

To adjust the amount of lumbar support
(if fitted, optional extra)

To adjust the height of the backrest
Lift trigger lever and lift backrest. Release lever to locate backrest at the desired height.



To adjust the angle of the backrest
Lift this pebble, move the back to the desired position and release the pebble.

B Blue = Back (adjustment of the back angle)



Green = Gravity (adjustment of seat height)

To adjust the height of the chair
While sitting in the chair lift this pebble to lower the height and then release it.
Stand off the chair and lift this pebble to raise the chair.


G



To adjust the seat slide
Lift pebble upwards to release seat, hold the backrest with your right hand to push the seat forwards or pull it back.

S

To adjust the rocking action tension (E)
For a softer action loosen the hand wheel (located under the seat on the left), for a stronger action tighten it.

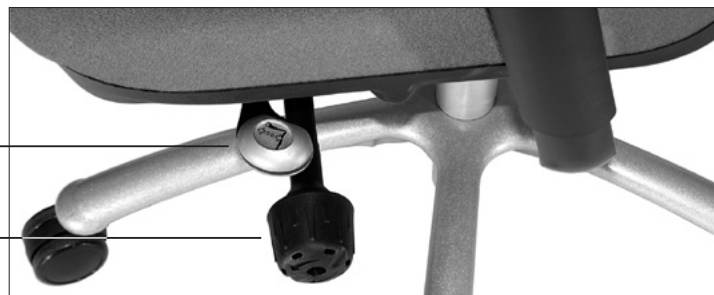


Left side view of chair

To adjust the height of the arms
Raise the armrest (push in button) until your elbow is in contact with the arm pad.

To adjust how far apart the arms are
Push down the lever under chair to free arm (pointing back below the arm post), adjust arm width and pull lever up to lock.

 
To adjust the arm pads

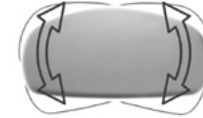

To rotate the armpads push in button. They can be rotated 180° for 'D' shape in or out and auto-lock when straight.



To reposition the pad on the arm support; sideways, forwards or backwards: push the pad in the desired direction. Six click stops front-to-back and five side-to-side.

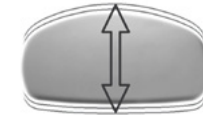

To adjust the rocking action tension (E)
For a softer action loosen the hand wheel (located under the seat on the left), for a stronger action tighten it.



M

Mauve = Movement (adjustment of the seat angle)

To adjust the seat angle
Pull pebble part way back to adjust seat angle or fully back for rocking action.
WARNING – only pull this pebble when sitting in the chair.

For rocking action
Pull pebble all the way back for rocking action. Push it forwards to lock the seat position.

The rocking action tension is correctly adjusted when you feel 'balanced'. Adjusting the angle of the backrest when in the rocking action also has an effect on the tension.

ADVANCE SEATING designs

E-MAIL: chairs@asd.co.uk

WEB SITE: www.asd.co.uk

FAX: +44 (0)20 8578 4352

TELEPHONE: +44 (0)20 8578 4308

70124/90804