

50

The controls on your Opera 50 chair

To adjust the height of the backrest

Lift this trigger lever and lift backrest. Release lever to locate backrest at the desired height.

To adjust the amount of lumbar support

Squeeze bulb. To release air in the aircell push the button above the aircell bulb.

To adjust the angle of the backrest

Lift this lever, move the back to the desired position and release the lever.

Blue = Back (adjustment of the back angle)



To adjust the seat angle and for rocking action

Lift this lever, leave in the up position, lean against the backrest to release anti-kickback mechanism and begin rocking. Lower this lever to lock seat and back angle, in one of three positions.

Mauve = Movement (adjustment of the seat angle)



To adjust arm support width

Under the arm support push down the lever to free arm, adjust arm width and pull lever up to lock.

To adjust the arm pads

To rotate push in inner button (under arm pad) click left or right (two stops) or rotate 180° for 'D' shape in or out. Autolocks when straight.

To reposition the pad – sideways, forwards or backwards

Push the pad in the desired direction. Six click-stops front to back and five sideways.

To adjust the height of the chair

While sitting in the chair lift this lever, to lower seat height, and then release it.

Green = Gravity (adjustment of seat height)



To adjust the rocking action tension

For a lighter action loosen the hand wheel, for a stronger action tighten it. Hand wheel moves in-out to aid turning.

To adjust the seat slide

Lift lever upwards to release seat, hold the backrest with your other hand to pull the seat forwards or push it back.



Left view of chair

ADVANCE SEATING *designs*

E-MAIL: chairs@asd.co.uk

WEB SITE: www.asd.co.uk

FAX: +44 (0)20 8578 4352

TELEPHONE: +44 (0)20 8578 4308

70222AG/90805