

10

The controls on your Opera 10 chair



To adjust the amount of lumbar support

If aircell fitted squeeze bulb and push button.
If Schukra fitted turn handwheel to adjust.

To adjust the height of the backrest

Lift trigger lever and lift backrest. Release lever to locate the backrest at the desired height.



To adjust the angle of the backrest

Lift this pebble, move the back to the desired position and release the pebble.

B

Blue = Back (adjustment of the back angle)



Green = Gravity (adjustment of seat height)

To adjust the height of the chair

While sitting in the chair lift this pebble to lower the height and then release it.
Stand off the chair and lift this pebble to raise the chair.

G



To adjust the seat slide

Lift pebble upwards to release seat, hold the backrest with your right hand to push the seat forwards or pull it back.

S

To adjust the rocking action tension (M)

For a softer action loosen the hand wheel (located under the seat), for a stronger action tighten it.



Left side view of chair

To adjust the height of the arms

Push in the button on the outside of the armpad and move the arm to the desired height and then release the button.

To adjust how far apart the arms are


To free arms, push down the levers (below the arm posts), adjust arm width and pull levers up to lock.

To adjust the arm pads

Rotate: To release and rotate the pad push in the button (on the inside of the pad). To lock the pad click the pad into a straight ahead position.

Front to back: Hold the top of the pad firmly and 'slide' it forwards or backwards to the desired click stop. Take care to only grip the pad and not the top of the arm as well.

Side to side: Hold the arm support with one hand and the pad firmly in the other (your hand should grip the pad over the button) and push, or pull, the pad to the desired click stop.

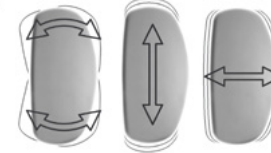

M

Mauve = Movement (adjustment of the seat angle)

To adjust the seat angle



Lift pebble part way up to adjust the seat angle then lower it to lock the seat.
Pulling the pebble fully up and releasing it sets rocking action.

WARNING - only lift this pebble up when sitting in the chair.

For rocking action - Lift ... Lift

Lift pebble all the up for rocking action, release pebble, it remains part way up. To stop rocking fully lift and lower pebble to lock the seat position.

The rocking action tension is correctly adjusted when you feel 'balanced'.
Adjusting the angle of the backrest when in the rocking action also has an effect on the tension.

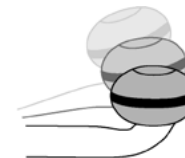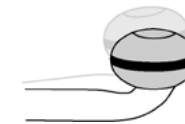

ADVANCE SEATING *designs*

E-MAIL: chairs@asd.co.uk

WEB SITE: www.asd.co.uk

FAX: +44 (0)20 8578 4352

TELEPHONE: +44 (0)20 8578 4308

81129/90804